


MASTERKRAFT


Curved Treadmill Pro Assembly Instructions

MCTMSP01

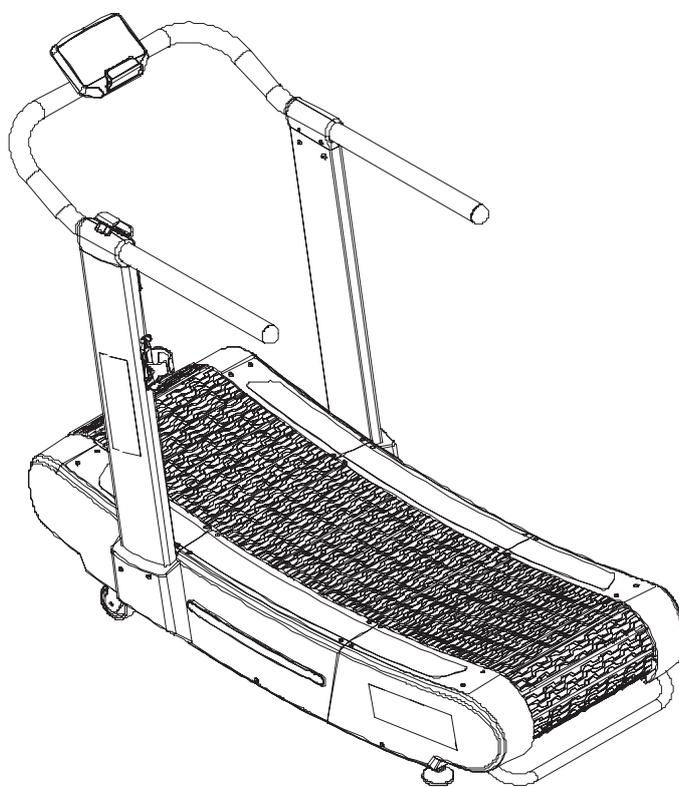


MCTMSP01

A-x1

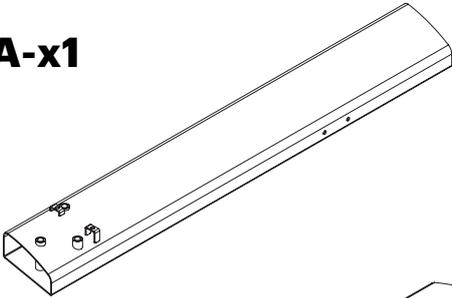


B-x1

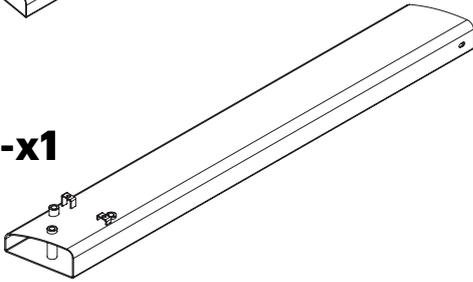


D-x1



E-x1

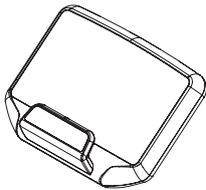


C-x1

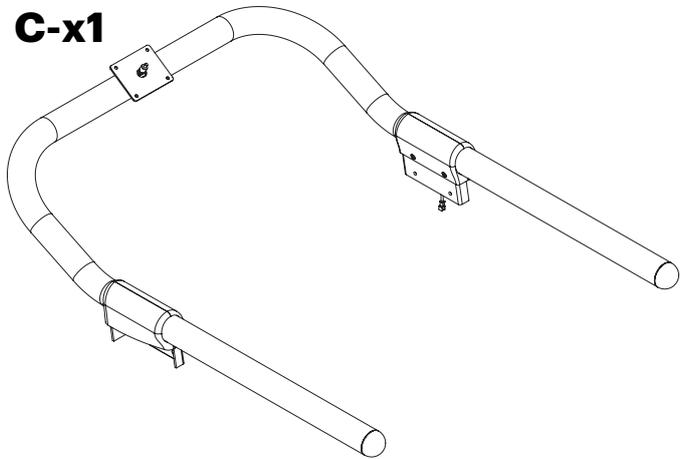


F-x1



G-x1

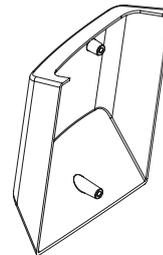


H-x1

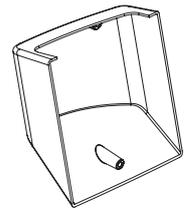


MCTMSP01

 6-M10x90IL AA



6-M8x12L GG

 

6-018x010.5X1.5t BB



6-M5x16L HH



2-M5x16L CC



3MM LL



6-M5x12L DD



4MM KK



2-M5x25L EE




5MM JJ



2-M5x30L FF





8MM II

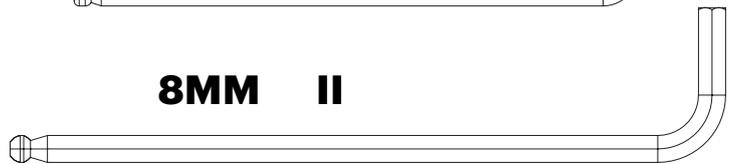

MCTMSP01



Unpack the treadmill base and parts and ensure that all listed parts are included in the packaging. Place the treadmill base facing forward (logo will be at the rear of the base).

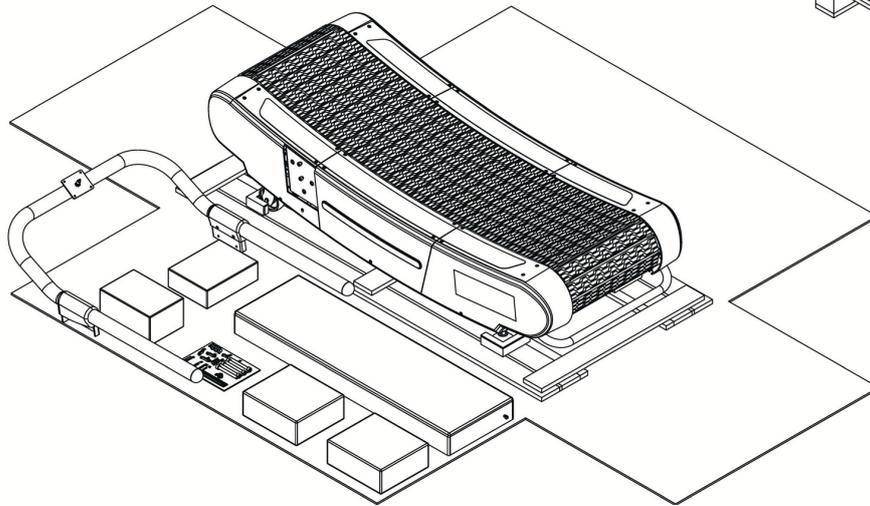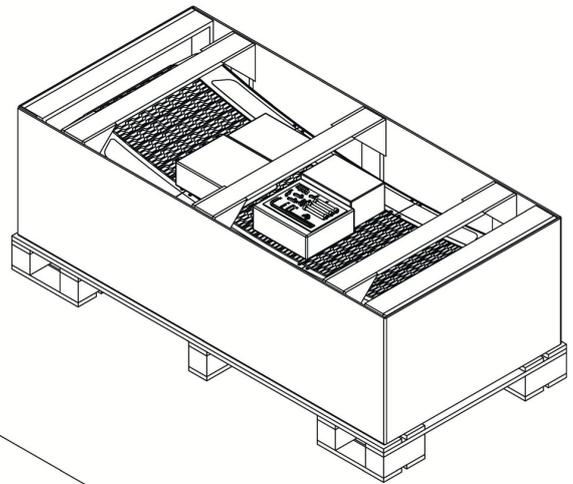

MCTMSP01

With the treadmill base facing forward, attach the left upright handle (A) to the left side of the base with 3 screws (AA) and 3 washers (BB), using the included 8mm allen wrench (II)

FRONT



8MM II

AA x3




BB x3



A


BB

AA

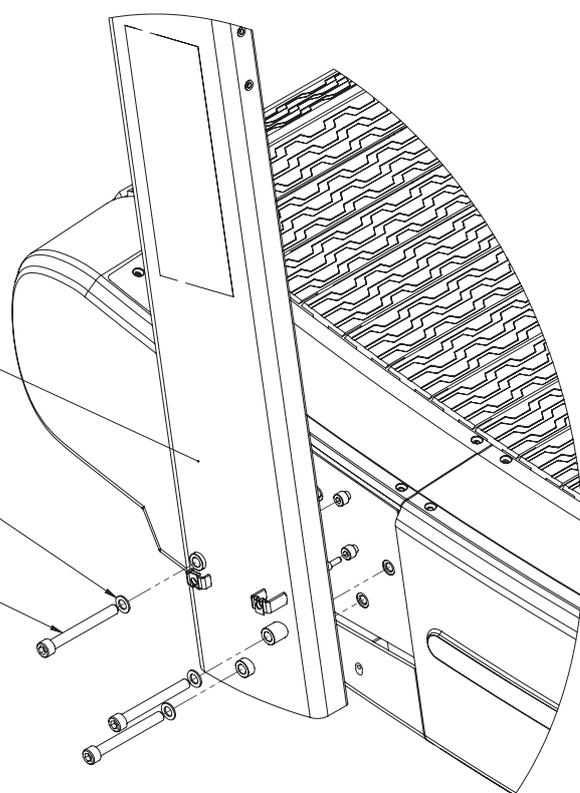


MCTMSP01


On the right side of the base, connect wire FW to wire BW and repeat the previous step to attach the right upright handle (B) to the right side of the base.

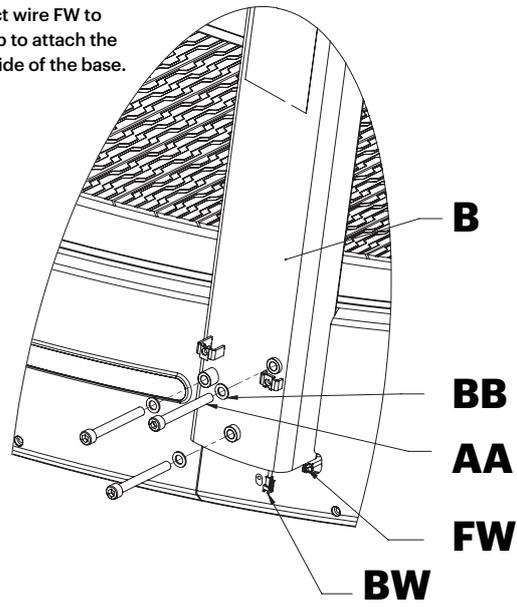

FRONT

 

MCTMSP01

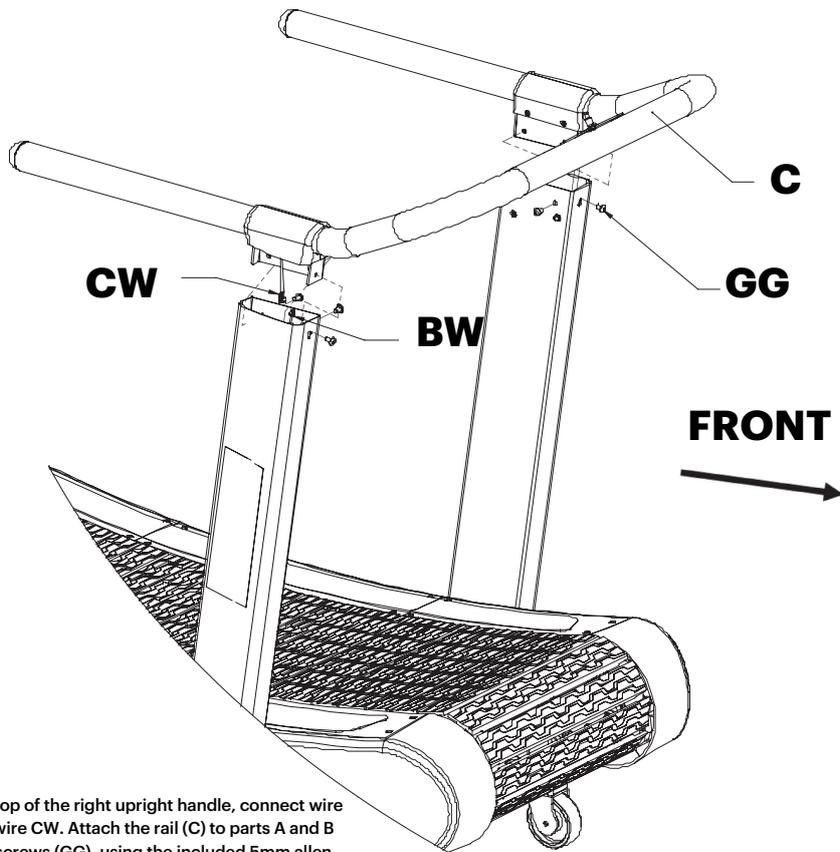


At the top of the right upright handle, connect wire BW to wire CW. Attach the rail (C) to parts A and B with 6 screws (GG), using the included 5mm allen wrench (JJ).

MCTMSP01

Attach the cup holder (D) to the left upright handle with 2 screws (CC) using the included 3mm allen wrench (LL).

At the centre of the rail, connect wire CW to wire EW. Attach the console (E) to the centre of the rail (C) with 4 screws (DD) using the 3mm allen wrench (LL)

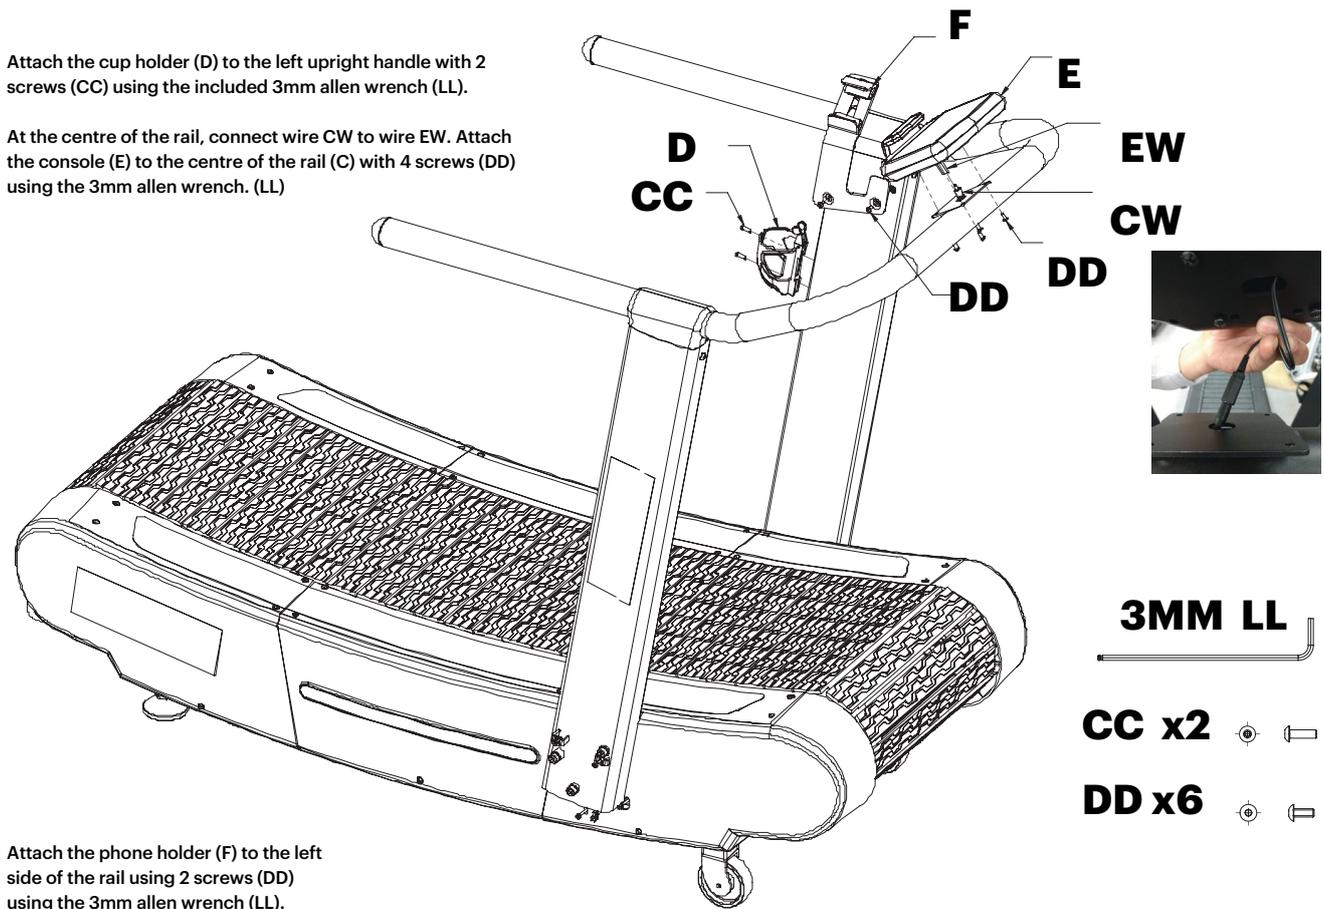

Attach the phone holder (F) to the left side of the rail using 2 screws (DD) using the 3mm allen wrench (LL).

3MM LL

CC x2 


DD x6 

MCTMSP01

Attach the left upright handle cover (G) to the left upright handle with 1 screw (HH) at the top right corner of the cover, 1 screw (EE) at the left corner, and 1 screw (FF) at the bottom of the cover, using the included 4mm allen wrench (KK).

 Attach the right upright handle cover (H) to the right upright handle with 1 screw (HH) at the top right corner of the cover, 1 screw (EE) at the left corner, and 1 screw (FF) at the bottom of the cover, using the included 4mm allen wrench (KK).



- HH x2** 
- EE x2** 
- FF x2** 